



user intermediate

75%

5. Ajuste

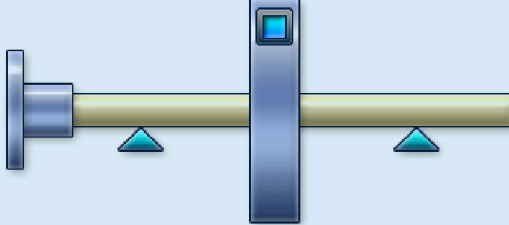

Montar masa de balanceo



60 ° #5

0.2 g

75 ° #6

0.3 g

◀ Previo

Próximo ▶

Datos

No.	Masa [g]	Angulo [°]	Vibration Ef. [mm/s]	Angulo [°]
1 B	—	—	6.386	205
2 A+	22.7	310	0.187	254
2 B	—	—	1.040	204
3 A+	2.6	315	0.461	315
3 B	—	—	0.066	143
4 A+	1.0	150	0.258	291
4 B	—	—	0.210	233

Calidad de balanceo:

12.94 @ 900 1/min

Fuerza residual:

8.539 N @ 900 1/min

—